

How To Mirror Any Chromebook Display

Input one end of an HDMI cable into your HDMI wall mount and the other end of the HDMI cable directly into a Chromebook.




***Note- For audio output you must connect the Chromebook to speakers.**

By default the projectors will "Extend" your Chromebook display.

To "MIRROR" your display, making exactly what is on the Chromebook appear on the whiteboard, follow these steps:

1a. Click on your icon located on the bottom right of your screen, 1b. Click "Extending screen..."

1b.

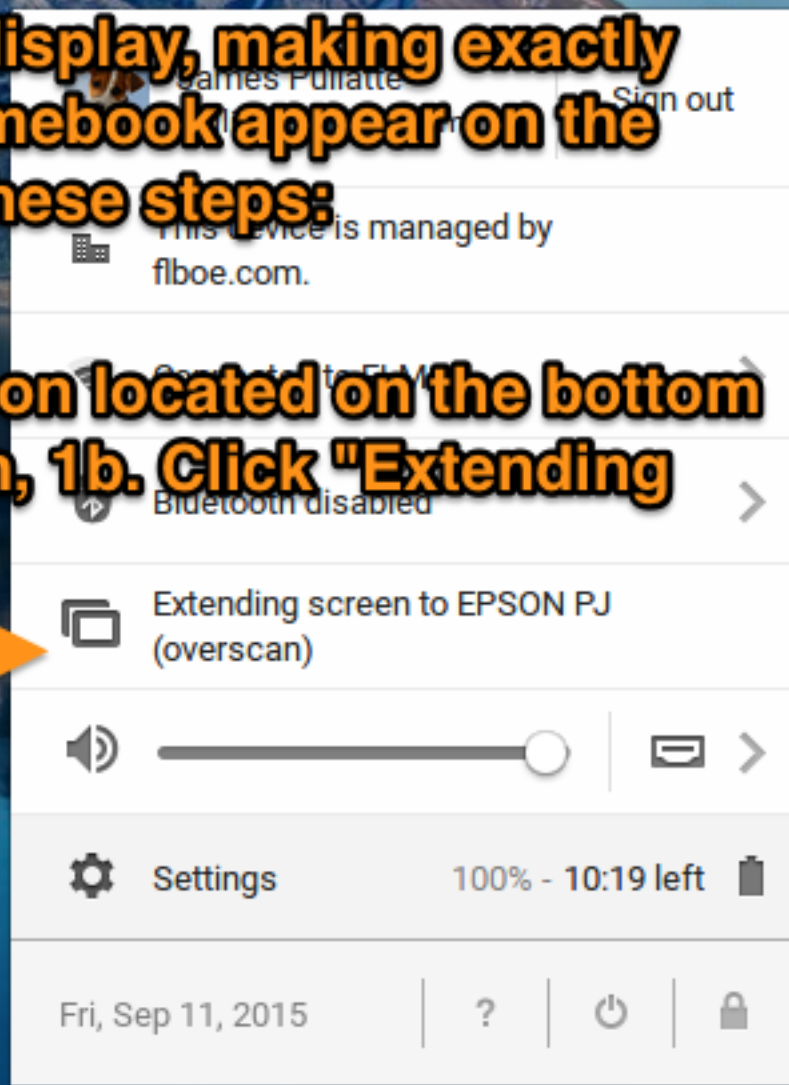

1a.



Settings

About Chrome OS

Search settings

Internet connection

Wi-Fi network
FLMAC

+ Add connection

Allow proxies for shared networks

Appearance

Set wallpaper...

Get themes

Reset to default

Show Home button

www.flboe.com [Change](#)

Always show the bookmarks bar

Device

Change settings specific to your device and peripheral

Touchpad speed:

Touchpad settings

Keyboard settings

Search

Set which search engine is used when searching from the omnibox

Google

Manage search engines...

Manage displays

Internal Display

EPSON PJ

Internal Display

Options:

Start mirroring

Make primary

Resolution:

1366x768 (Best)

Orientation:

Standard

TV alignment:

Adjust...

Done

2. Click "Start mirroring" and then click done.

The Chromebook's screen should now be visible on your board.